SPARA DESSA ANVISNINGAR

SANTÉ

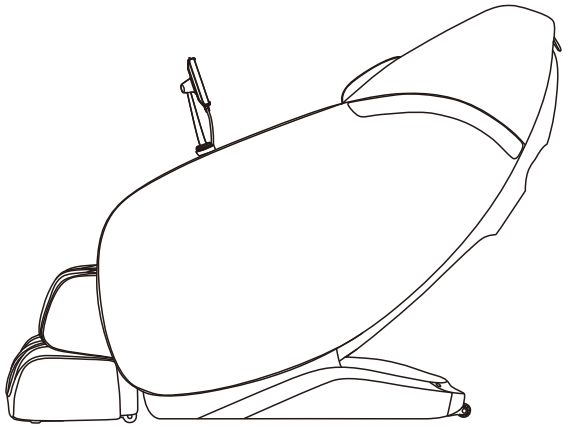

YATORI 2D
MASSAGEFÅTÖLJ

Bruksanvisning

Grattis till ditt köp av massagefåtöljen Yatori 2D

Tack för att du har köpt den här produkten. Läs bruksanvisningen noggrant innan du använder produkten, så att du använder den på rätt sätt. Var särskilt uppmärksam på de viktiga säkerhetsvarningarna och spara bruksanvisningen för framtida bruk.
Observera: Tillverkaren förbehåller sig rätten att ändra och tolka produktens utformning. Om produktens funktioner skiljer sig från beskrivningen i bruksanvisningen beror det på löpande produktförbättringar, och inget separat meddelande skickas ut. Produktens faktiska funktioner och färger gäller.

INNEHÅLL

Före användning

Säkerhetsanvisningar 02
Montering 06
Placering av massagestolen 07
Före användning 09
Produktens delar 10

Användning

Användarinstruktioner 14

Underhåll

Rengöring och underhåll 19

Viktig information

Felsökning 20
Produktspecifikationer 21

- Läs alla tillhörande anvisningar noggrant före användning.
- Anvisningarna nedan hjälper dig att använda produkten säkert och korrekt.
- För att tydligt visa hur allvarlig skada eller skadegörelse felaktig användning kan orsaka är anvisningarna indelade i **”Varning”** och **”Observera”**. Båda är viktiga för säkerheten och måste följas.

⚠ **Varning**	Felaktig användning kan leda till allvarlig personskada eller dödsfall.
⚠ **Observera**	Felaktig användning kan leda till lättare personskada eller skada på egendom.

- Var uppmärksam på symbolen före varje säkerhetspunkt.

⃠ **Förbjudet**	Absolut förbjudet

Följande personer ska inte använda produkten

⃠ **Förbjudet**

- Produkten är inte avsedd att användas av personer (inklusive barn) med nedsatt fysisk, sensorisk eller mental förmåga, eller med bristande erfarenhet och kunskap, om de inte har fått tillsyn eller instruktioner om användningen av en person som ansvarar för deras säkerhet.
- Barn ska hållas under uppsikt så att de inte leker med produkten.
- Produkten har en uppvärmd yta. Personer som är okänsliga för värme ska vara försiktiga när de använder produkten.
- Personer med benskörhet (osteoporos).
- Personer med allvarlig hjärtsjukdom eller med implanterade medicinska apparater som påverkas av elektromagnetiska vågor, till exempel pacemaker eller defibrillator.
- Personer med feber (över 38 grader).
- Gravida kvinnor, kvinnor som nyligen har fött barn samt kvinnor under menstruation.
- Personer som enligt läkares råd inte får massage på grund av trombos, aneurysm, svåra åderbråck eller andra cirkulationssjukdomar. Under två veckor efter att en blodpropp har uppstått är det strikt förbjudet att massera kroppsdelar där blodproppen finns.
- Personer med skador eller hudproblem.
- Barn under 14 år utan tillsyn samt personer som är medvetslösa.
- Personer som av sin läkare har ordinerats vila samt personer som mår dåligt.
- Personer med ryggradsavvikelser eller skolios, samt personer som av medicinska skäl på grund av andra sjukdomar inte får använda produkten.
- Personer som är våta om kroppen.

Viktiga säkerhetsvarningar

⚠ **Varningar**

- Om nätsladden är skadad måste den bytas ut av tillverkaren, tillverkarens serviceombud eller en person med motsvarande behörighet för att undvika fara.
- Håll barn borta från produktens rörliga delar.
- Använd ett korrekt jordat eluttag som är anpassat för produkten.
- Dra ur nätsladden efter användning och före rengöring för att undvika personskador och skador på produkten.
- Använd produkten enligt anvisningarna i bruksanvisningen.
- Använd inte delar eller tillbehör som inte rekommenderas.
- Använd inte produkten utomhus.
- Använd inte produkten nära öppen eld, till exempel en spis, och rök inte under användning.
- Använd inte värmeutrustning, till exempel elektriska filtar, på produkten.
- Sitt inte på stolens rygg, benmassagedelen, axeldelen eller armstöden, och stå inte på sitsen.
- Läs bruksanvisningen innan du använder produkten.
- Använd aldrig produkten för något ändamål som inte beskrivs i bruksanvisningen.
- Begränsa varje användning till 20 minuter.
- Använd inte produkten om klädseln eller lädret är trasigt eller skadat.
- Tappa inte ner föremål i produkten.
- Somna aldrig medan du använder produkten.
- Använd inte produkten om du är berusad eller mår dåligt.
- Använd inte produkten inom en timme efter en måltid.
- Använd inte överdriven kraft när du använder produkten, så att du inte skadar dig.
- Använd inte produkten till något annat än massage.
- Håll produkten borta från barn. Förvara den inte nära höga temperaturer eller öppen eld.
- Tryck in stickkontakten helt i eluttaget och se till att den sitter ordentligt under användning.
- Använd endast godkända förlängningssladdar.
- Bryt strömmen när du lämnar lokalen.
- Avbryt användningen omedelbart och bryt strömmen om produkten avger onormala ljud eller lukter, blir överhettad eller inte fungerar som den ska.
- Anslut inte produkten till ett uttag i en lampsockel.
- Den totala strömförbrukningen för anslutna apparater får inte överstiga märkströmmen för eluttaget eller kretsen.
- Använd aldrig produkten nära brännbara eller explosiva material.
- Ta inte isär produkten och ändra inte dess interna ledningar, komponenter eller säkerhetsfunktioner.
- Dra inte i nätsladden när du drar ur kontakten.
- Använd endast säkringar med angiven märkning. Ersätt dem aldrig med ledande material eller säkringar med fel märkning.
- Ändra inte utlösningsinställningarna för säkringar eller jordfelsbrytare.

Säkerhetsåtgärder



Observera

- Kontrollera att nätspänningen stämmer överens med produktens specifikation.
- Sätt aldrig i eller dra ur nätsladden med våta händer.
- Se till att inget vatten tränger in i produkten, för att undvika elstötar och skador.
- Dra inte i nätsladden när du sätter i eller drar ur kontakten. Hantera den varsamt.
- Skada inte sladden och ändra inte kretsen.
- Rengör inte elektriska delar, till exempel strömbrytaren eller kontakten, med en våt trasa.
- Håll dig borta från produkten vid strömavbrott, så att du inte skadas om strömmen plötsligt kommer tillbaka.
- Sluta omedelbart att använda produkten om den inte fungerar och kontakta din återförsäljare.
- Sluta att använda produkten om du mår dåligt och kontakta vårdpersonal.

Skötsel och underhåll



Observera

- Produkten får endast underhållas av ett servicecenter som tillverkaren har utsett. Ingen användare får ta isär eller reparera produkten utan tillstånd.
- Glöm inte att stänga av huvudströmbrytaren efter användning.
- Använd inte produkten om eluttaget sitter löst.
- Om produkten inte ska användas under en längre tid, rulla ihop nätsladden och förvara produkten i en torr och dammfri miljö.
- Förvara inte produkten i hög temperatur eller nära öppen eld. Undvik att utsätta den för direkt solljus under längre tid.
- Rengör produkten med en torr trasa. Använd aldrig thinner, bensen eller alkohol.
- Mekanismen är särskilt konstruerad och kräver inget särskilt underhåll.
- Stick inte hål i produkten med vassa föremål.
- Rulla eller dra inte produkten på ojämnt underlag. Lyft den i stället när den ska flyttas.
- Använd produkten med pauser. Låt den inte gå oavbrutet under längre tid.
- Låt produkten vila mellan användningarna. Kontinuerlig långvarig användning är förbjuden.

Förvaring



Observera

- Temperatur i förvaringsutrymmet: 5 °C till 40 °C.
- Relativ luftfuktighet (RH) mellan 20 % och 80 %, fritt från frätande gaser och i ett välventilerat utrymme.

Användningsmiljö



Observera

- Använd inte produkten i mycket fuktiga miljöer, till exempel i badrum.
- Sluta omedelbart att använda produkten om omgivningstemperaturen plötsligt ändras kraftigt.
- Använd inte produkten direkt efter en plötslig förändring av omgivningstemperaturen.
- Använd inte produkten i miljöer med mycket damm eller frätande gaser.
- Använd inte produkten i trånga utrymmen eller utrymmen med dålig ventilation.

Åtgärder vid vanliga fel



Observera

- Om motorn hörs under användning är det normalt driftljud.
- Om handkontrollen inte fungerar som den ska, kontrollera att stickkontakten och uttaget sitter ordentligt och att strömbrytaren är påslagen.
- När den inställda drifttiden är slut stängs produkten av automatiskt. Om produkten har varit i drift under lång tid stänger temperaturskyddet av den automatiskt. Produkten kan användas igen efter en halvtimme.
- Viktgräns: 120 kg. Tyngre användare bör köpa en förstärkt modell.

Montering

Montering av benstödet

1. Anslut benstödets kabel och luftslang till det främre uttaget på stålramen (bild 1).
2. Tryck in den anslutna kabeln och luftslangen i hålet i ryggstödets ram (bild 2).
3. När kablarna är anslutna, öppna benstödets fästlock på båda sidor av stålramen (bild 3).
4. Lyft in benstödet i skåran, stäng fästlocken och skruva fast det med 2 skruvar (bild 4).

Obs: Detta steg kan hoppas över om stolen levereras helt monterad.

Bild 1

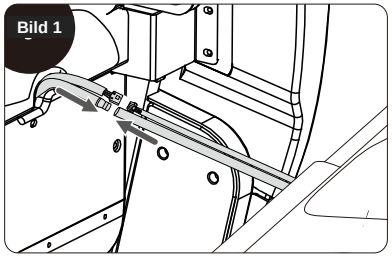

Bild 2

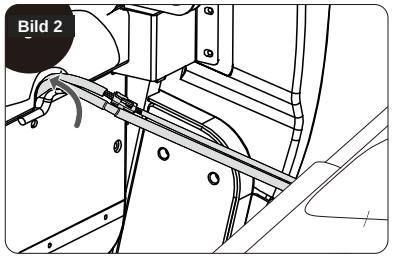

Bild 3

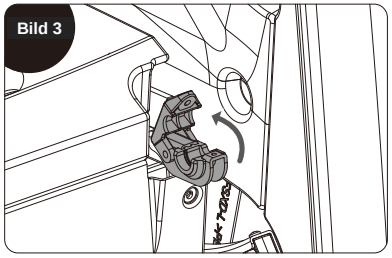

Bild 4

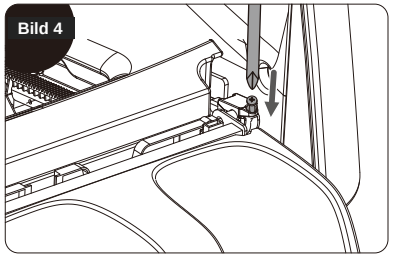

Placering av massagestolen

Placering

Se till att det finns tillräckligt med utrymme så att massagestolen kan fällas bakåt minst 30 cm.

Observera

Utsätt inte massagestolen för direkt solljus eller höga temperaturer, till exempel framför värmekällor. Placera den där den skyddas från värme och direkt solljus. Om stolen ska stå länge på samma plats rekommenderas en mjuk matta under den. Mattan bör vara så stor att den täcker ytan där stolen och fotstödet når golvet.

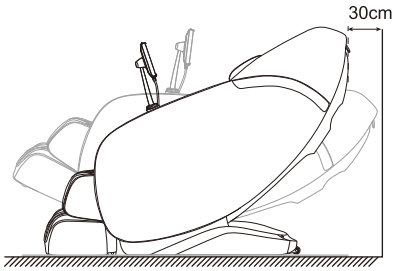

Lyft av produkten

Produkten är tung och måste lyftas av två personer.

Observera

1. Lyft massagestolen när den ska flyttas på ömtåliga golv, till exempel trägolv.
2. Även på andra underlag rekommenderas att stolen lyfts, så att hjulen inte skadas. Var försiktig när du sänker ner stolen på sin plats, så att du inte klämmer händer eller fötter. Släpp inte stolen förrän den står helt plant. Lägg gärna en matta eller ett skydd på golvet för att undvika golvskador.

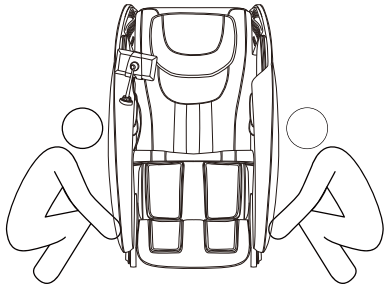

Placering av massagestolen

Flytta stolen

Flytta massagestolen med de bakre hjulen. Luta stolen bakåt cirka 45° enligt bilden och flytta den sedan.
OBS! Om stolen lutas för mycket kan den välta och skadas.

Observera

1. Stäng av stolen på rätt sätt innan du flyttar den, så att den återställs, och bryt sedan strömmen.
2. Se till att stolen är tom när den flyttas. Människor, husdjur och föremål får inte finnas kvar på stolen.
3. Kör inte över kanter som är högre än 2 mm eller springor som är bredare än 5 mm.
4. Hjulen är inte avsedda för långa förflyttningar i ett svep. Om sträckan är längre än 50 meter, flytta stolen långsamt och jämnt.

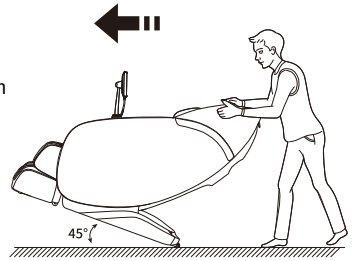

Ta av och använda nackkudden och ryggkudden

Nackkudden minskar intensiteten i knådningsmassagen på nacke och axlar. Du bestämmer själv om du vill använda den, men det rekommenderas. Ryggkudden är fäst i ryggstödet med en dragkedja (1), och nackkudden är fäst i ryggkudden med en dragkedja (2).

Observera

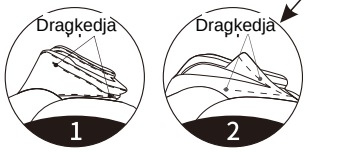

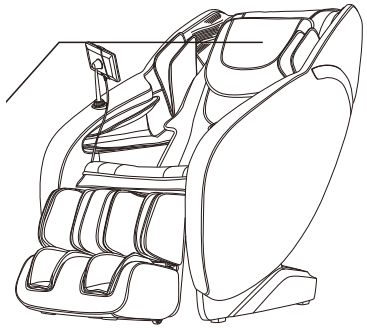

Före användning

Kontrollera omgivningen

Se till att det inte finns några människor, husdjur eller föremål runt stolen.

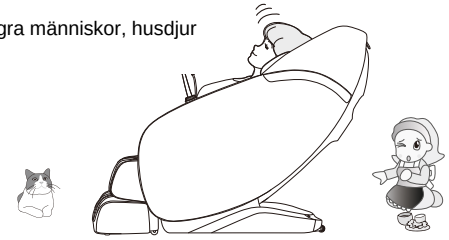

Observera

Kontrollera att inga föremål har fastnat i stolens springor

Se till att inga främmande föremål har fastnat vid benen, fötterna eller andra delar innan massagen startar. Stoppa aldrig in händer, fötter eller huvud mellan benstödets mekanism och stolens stomme, eller mellan armstödet och stolens skål. Stoppa heller aldrig in händer, fötter eller huvud under tyget eller lädret som täcker massageytorna.

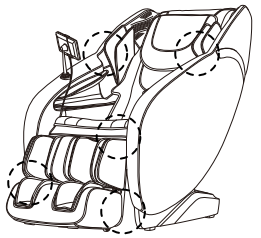

Observera

Slå på strömmen

Observera

Anslut nätsladden

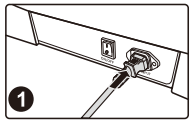

Så här slår du på strömmen

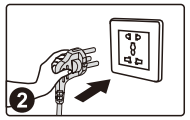

Slå på strömbrytaren (läge ”I”)

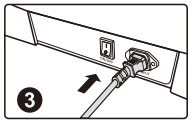

Varning

- Kontrollera att nätsladden och stickkontakten är oskadade före användning.
- Anslut produkten till en strömkälla som motsvarar produktens angivna krav.
- Det är strikt förbjudet att använda en annan strömkälla än den angivna.
- Det är strikt förbjudet att utan tillstånd ansluta någon form av strömomvandlare till produkten.

Produktens delar

Komponenter

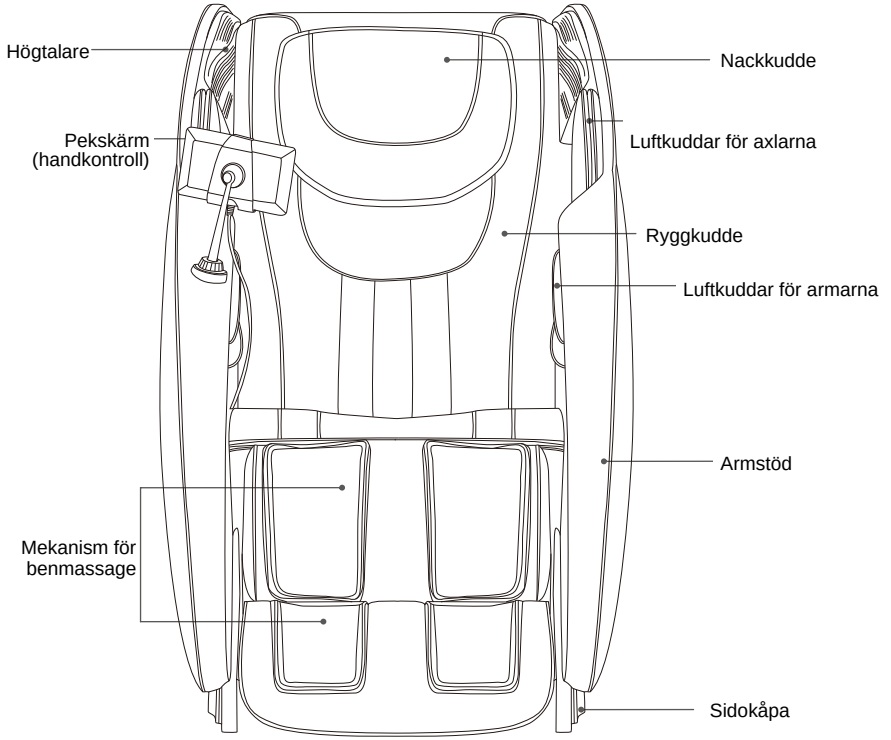

Produktens delar

Funktioner per kroppsdel

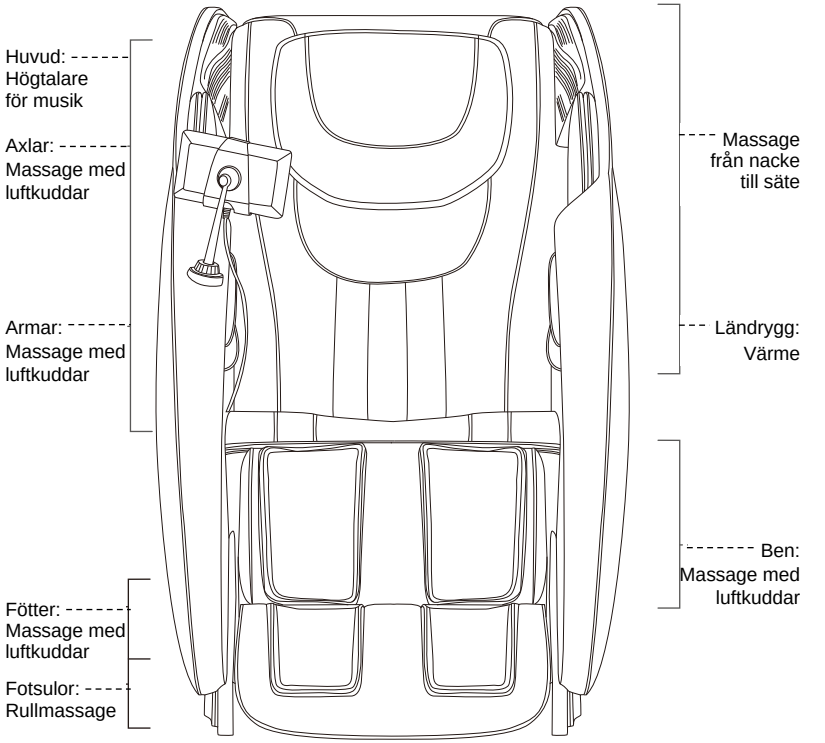

Produktens delar

I. Handkontrollens knappar:

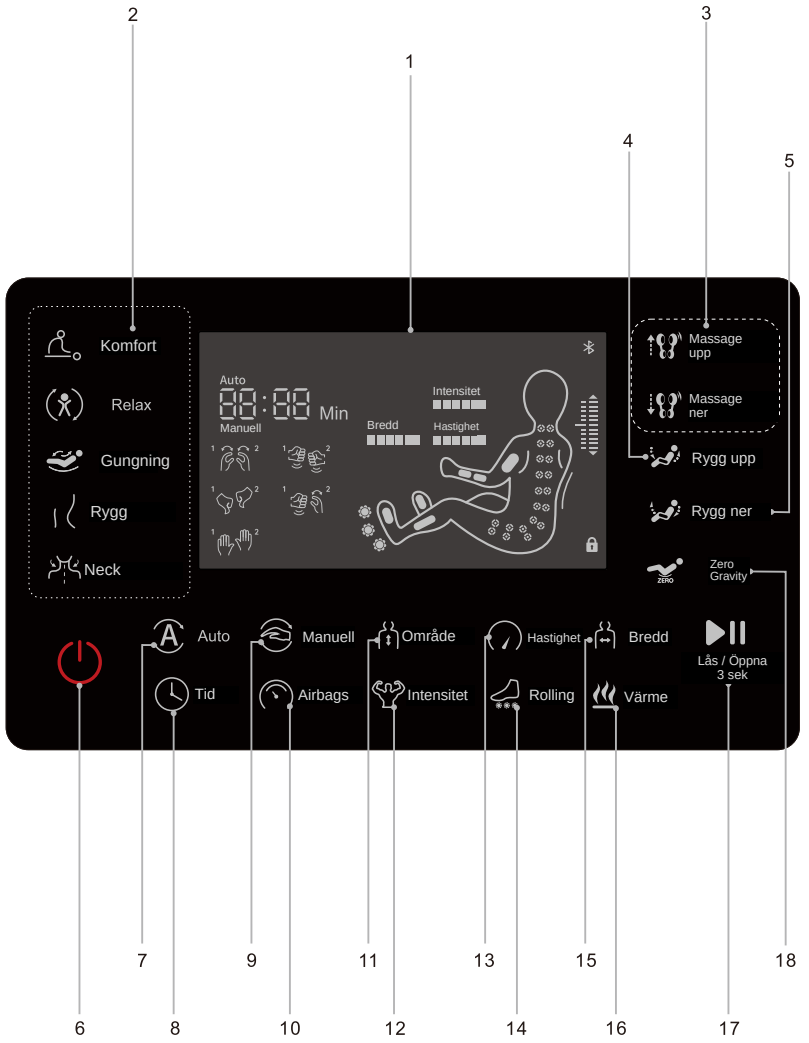

Produktens delar

1.Skärm (LCD):
· Visar alla massagefunktioner.
2.Knappar för automatisk massage (Komfort, Relax, Gungning, Rygg, Neck):
· Se sidan 15 för mer information.
3.Massage upp och Massage ner:
· Justerar massagepunkterna vid axlarna och massagepositionen (i punktläge och delområdesläge).
4.Rygg upp:
· Höjer ryggstödet.
5.Rygg ner:
· Fäller ryggstödet bakåt.
6.Strömknapp:
· Slår på och stänger av massagestolen.
7.Auto:
· Väljer bland 7 ytterligare automatiska program. Se sidan 15 för mer information.
8.Tid:
· Ställer in tiden. Se sidan 18 för mer information.
9.Manuell:
· Se sidan 16 för mer information.
10.Airbags:
· Väljer zon för luftkuddemassagen. Se sidan 16 för mer information.
11.Område:
· Väljer massageområde. Se sidan 16 för mer information.
12.Intensitet:
· Justerar luftkuddarnas tryck i fem nivåer.
13.Hastighet:
· Justerar massagehastigheten i fem nivåer.
14.Rolling:
· Se sidan 16 för mer information.
15.Bredd:
· Justerar massagebredden i fem nivåer.
16.Värme:
· Slår på och stänger av värmen.
17.Lås / Öppna (paus, start och barnlås):
· Se sidan 17 för mer information.
18.Zero Gravity:
· Växlar mellan fyra automatiska lutningslägen efter dina önskemål.

II. Starta massagen

① Tryck på strömknappen för att starta massagen. Standardläget är Komfort.

② Stolen justerar vinkeln automatiskt (tryck på **Auto** för att hoppa över).

③ Stolen mäter automatiskt var dina axlar befinner sig. Sitt med ryggen tätt mot stolen (tryck på **Auto** för att hoppa över).

④ Justera axelpositionen. Om den uppmätta positionen inte stämmer med dina axlar kan du justera den med knapparna för axelposition upp och ned (tryck på **Auto** för att hoppa över). Det finns totalt 11 axelpositioner. Om du inte justerar något inom 10 sekunder startar massagen.

Obs: Under uppstarten kan du välja ett automatiskt program. Om du trycker på samma program igen hoppar stolen över uppstarten och går direkt till massageläget.

Knapp	Beskrivning	Skärm
Massage upp	Flyttar massagekulorna uppåt till lämplig position	
Massage ner	Flyttar massagekulorna nedåt till lämplig position	

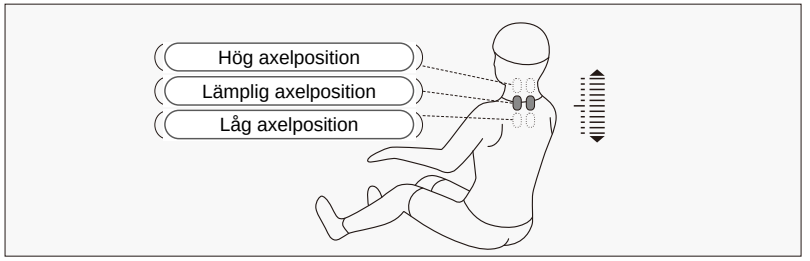

Medan stolen mäter axelpositionen och massagepunkterna visar handkontrollens skärm en ikon för justering av axelpositionen och stolen piper. Tryck då på knapparna för axelposition upp och ned för att justera axelpositionen.

· Automatisk massage

Funktion	Knapp	Beskrivning	Skärm
Automatisk massage	Komfort	**Bekväm massage:** Den skönaste massageupplevelsen.	Auto 01
	Relax	**Avslappnande massage:** Mjuk och lugnande djupmassage som lättar trötthet i kroppen och ger avslappning.	Auto 02
	Gungning	**Gungande massage:** Efterliknar en gungstol för avslappning och bättre sömn.	Auto 03
	Rygg	**Rygg och midja:** Fokuserar på ryggen och midjan.	Auto 04
	Neck	**Nacke och axlar:** Riktar sig mot axlar och nacke för lindring.	Auto 05
	Auto	**Helkroppsmassage:** Uppiggande massage för hela kroppen.	Auto 06
		Ryggradsvård: Fokuserar på avslappning längs ryggraden.	Auto 07
		Återhämtning: Lättar trötthet och förbättrar mikrocirkulationen.	Auto 08
		Meridianavslappning: Främjar balansen i meridianerna och stärker immunförsvaret.	Auto 09
		Sittande stretch: Minskar fettansamling vid höfter och lår.	Auto 10
		Lugn sömn: Förbättrar sömnkvaliteten genom akupunkturpunktsmassage.	Auto 11
		Fritid och hälsa: Motverkar en stillasittande livsstil genom att stärka kroppens funktioner.	Auto 12

· Manuell massage för överkroppen

Funktion	Knapp	Inställning av massagekulor		Skärm
Teknik	Manuell	Knådning: Hastighet.		
		Tapping: Hastighet, bredd.		
		Knådning och tapping: Hastighet.		
		Shiatsu: Hastighet, bredd.		
		Knackning: Hastighet, bredd.		
Hastighet	Hastighet	Fem hastighetsnivåer.		Speed
Bredd	Bredd	Fem breddnivåer.		Width
Ryggen	Område	Massage på en fast punkt.		H1 Manual
		Massage fram och tillbaka inom ett litet område.		H2 Manual
		Massage fram och tillbaka över hela ryggen.		H3 Manual
		Övre ryggen: Massage fram och tillbaka.		H4 Manual
		Nedre ryggen: Massage fram och tillbaka.		H5 Manual
	Massage upp	Justera massagepositionen: (I punktläge och delområdesläge kan du justera massagepositionen).	Mekanismen flyttas uppåt.	
	Massage ner		Mekanismen flyttas nedåt.	

· Luftkuddemassage

Funktion	Knapp	Beskrivning	Skärm
Luftkudde läge	Airbags	Helkropp: Luftkuddemassage för armar, axlar, ben och fötter.	
		Överkropp: Luftkuddemassage för armar och axlar.	
		Underkropp: Luftkuddemassage för ben och fötter.	
Ben: tryck	Intensitet	Fem styrkenivåer.	Air Strength

· Fotrullmassage

Funktion	Knapp	Beskrivning	Skärm
Fotrullar	Rolling	Tryck på knappen för att slå på eller stänga av fotrullmassagen. Den växlar mellan fyra lägen (av, svag, medel och stark).	

· Värme

Funktion	Knapp	Beskrivning	Skärm
Värme	Värme	Tryck på knappen för att slå på eller stänga av värmen.	

· Paus och start

Funktion	Knapp	Beskrivning	Skärm
Paus/start	Lås / Öppna 3 sek	Tryck på knappen under massagen för att pausa alla rörelser direkt. Tryck igen för att fortsätta där massagen pausades. Om pausen varar längre än 20 minuter stängs massagestolen av automatiskt.	
Barnlås		Håll in knappen för barnlås i 3 sekunder för att låsa massagestolen. Symbolen med ett lås visas på skärmen och alla andra knappar slutar fungera. Lås upp genom att hålla in knappen igen i 3 sekunder. Symbolen försvinner och knapparna fungerar som vanligt.	

· Justera lutningen

Funktion	Knapp	Beskrivning
Upp	Rygg upp	Upp: Håll in knappen för att höja ryggstödet och sänka benstödet långsamt. Stolen piper tills den når översta läget. Släpp knappen för att stoppa direkt.
Ned	Rygg ner	Ned: Håll in knappen för att fälla ryggstödet bakåt och höja benstödet gradvis. Stolen piper tills den når nedersta läget. Släpp knappen för att stoppa direkt.
Automatisk lutning	Zero Gravity	Zero Gravity: Varje tryck växlar till nästa automatiska lutningsläge. Det finns totalt fyra lägen som växlar i tur och ordning.

· Övriga manuella funktioner

Funktion	Knapp	Beskrivning	Skärm
Timer	· Tid	Standardtiden är 20 minuter. Varje tryck lägger till 5 minuter, upp till högst 30 minuter. Efter 30 minuter börjar timern om på 5 minuter.	20min

III. Använda högtalarna med Bluetooth:

1. Öppna ”Inställningar” på din mobil eller surfplatta. Välj ”Bluetooth” och slå på det. Enheten börjar då automatiskt söka efter nya enheter.
2. När stolen dyker upp i listan (namnet börjar med IMCM), tryck på namnet och välj ”Parkoppla” när du får frågan.
3. Öppna musikspelaren på din enhet och välj en låt för att börja spela.

(Obs: Instruktionerna ovan gäller för de flesta enheter. Stegen kan variera beroende på enhetens operativsystem och version.)

IV. Avsluta massagen:

1. Tryck på strömknappen på handkontrollen under massagen för att direkt stänga av alla massagefunktioner. Massagestolen återgår då till sitt ursprungsläge.
När timern når den inställda tiden stängs alla massagefunktioner av automatiskt. Massagestolen stannar i sitt nuvarande läge och återställs inte. Tryck på strömknappen för att återställa stolen.
2. För att stänga av massagestolen helt, bryt strömmen enligt bilden nedan.
Obs: Följ bilderna nedan för att bryta strömmen.

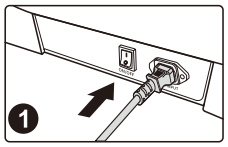

Stäng av (läge ”0”)

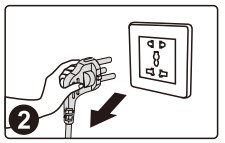

Dra ur stickkontakten

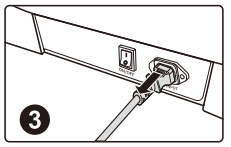

Koppla bort nätsladden från stolen

Rengöring av konstläder (PVC) och plastdelar

Torka av lädret med en mjuk och torr trasa.

- Använd inte kemikalier som thinner, bensin eller alkohol för att rengöra stolen.
- Om du använder läderskötselprodukter från handeln (till exempel trasor), följ deras bruksanvisning.
- Om konstlädret är mycket smutsigt, rengör det så här:

① Blöt en mjuk trasa i vatten eller varmt vatten med 3 % till 5 % neutralt rengöringsmedel och vrid ur den ordentligt.
② Torka av lädret med trasan.
③ Torka bort rengöringsmedlet med en trasa som har blötts i rent vatten och vridits ur ordentligt.
④ Torka efter med en urvriden mjuk trasa.
⑤ Låt lädret lufttorka.

- Fläckar som är svåra att få bort kan tas bort med en melaminsvamp från handeln som har doppats i neutralt rengöringsmedel.
- Torka inte ytan med hårfön.
- Färg från textilier kan missfärga konstlädret. Var försiktig när du sitter i stolen med jeans eller färgade kläder.
- Låt inte dessa delar vara i kontakt med plast under längre tid, eftersom det kan orsaka missfärgning.
- Hårfärg kan missfärga konstlädret. Täck de ytor som kan komma i kontakt med håret med en handduk om du har färgat håret.





Felsökning

Problem	När benstödet eller ryggstödet har nått ett visst läge händer ingenting när du trycker på motsvarande justeringsknapp, och stolen piper ihållande.
Lösning	Stolen har ett ändlägesskydd som är anpassat efter konstruktionen och ergonomin. När gränsen nås hörs en varningssignal.

Problem	Ingen funktion, eller vissa funktioner, fungerar efter att stolen har slagits på.
Lösning	När du har tryckt på strömknappen måste du välja ett automatiskt program eller ett annat läge. Om ingenting väljs stängs stolen av automatiskt efter 20 minuter. I det manuella läget kan vissa funktioner vara avstängda och behöver då ställas in manuellt.

Problem	Stolen avger ett gnidande ljud från lädret när den ändrar läge.
Lösning	Produkten är tillverkad av korrosionsbeständigt läder av hög kvalitet som uppfyller miljökraven. Läder kan ge ifrån sig svaga ljud när rörliga delar gnids mot varandra, vilket är normalt. Obs: Om du hör ett rivande ljud från tyget eller lädret medan stolen är igång, sluta använda den direkt och kontakta en fackman för kontroll och reparation.

Problem	Massagehjulen når inte upp till axlarna eller nacken.
Lösning	Om huvudet inte vilar mot nackkudden eller ryggen inte ligger mot ryggstödet kan axelpositionen mätas lägre än den faktiska positionen. Sätt dig längst in i stolen, vila huvudet mot nackstödet och börja om från början.

Problem	Produkten är skadad. Nätsladden eller stickkontakten blir onormalt varm.
Lösning	Kontakta en auktoriserad serviceverkstad för att undvika olyckor.

Kontakta gärna utsedd servicepersonal om du har frågor eller funderingar om produkten.

Produktspecifikationer

Tekniska data

- Modell: Massagefåtölj Santé Yatori 2D
- Artikelnummer: MC-A312-N-1
- Märkspänning: 220-240V~50Hz/60Hz
- Strömförbrukning: 80 W/h
- Timer: 5-30 minuter
- Märkning: CE
- Material: PU-konstläder, stål, elektroniska komponenter.

Mått och dimensioner:

- Upprätt: 156 x 75 x 114 cm.
- Nedsänkt: 172-188 x 75 x 92 cm.
- Bredd säte: 51 cm.
- Bredd axlar: 58 cm.
- Nettovikt: 79 kg

Santé Sweden AB
Org.nr. 556646-7154
Internet: www.massageprodukter.se
E-post: info@massageprodukter.se
Telefon: 020-27 27 20

Copyright © Santé Sweden AB
Alla rättigheter förbehålles

SANTÉ

SAVE THESE INSTRUCTIONS

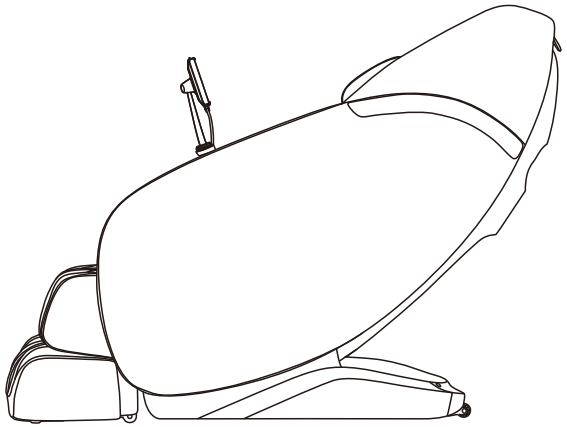

A312B-2
MASSAGE CHAIR

Operation Instructions

Thanks for purchasing this product. Before using the product, please read this instruction manual carefully to ensure proper usage. Pay special attention to important safety warnings, and store this manual properly for future reference.

Note: Our company reserves the right to modify and interpret the product design. If there are any differences between the product functions in the market and those described in the manual, it is part of our continuous product improvement process, and we will not issue separate notifications. The actual product functions and colors are subject to the physical product.

CONTENTS

Before Use

Safety Precautions ---- 02-05
Installation parts ---- 06
Place massage chair ---- 07-08
Before Use ---- 09
Product Structure ---- 10-13

Usage Instructions

Operating Instructions ---- 14-18

Maintenance

Cleaning and Maintenance ---- 19

Key Notices

Troubleshooting ---- 20
Product Specifications ---- 21

Safety Precautions (Must be observed)

■Please read all relevant instructions carefully before use.
■The notes marked here will help you to use the product safely and correctly.
■In order to clearly indicate the extent of harm and damage, precautions are divided into **"Warning"** and **"Caution"** that may be caused by incorrect use. Both of them are important for safety and must be followed.

⚠ **Warning**	Indicates that serious injury or death may result from improper use.
⚠ **Caution**	Indicates that misuse may cause minor injury or property damage.

■Please pay attention to the symbol before each safety item.

⃠**Forbidden**	Absolutely Prohibited

The following populations should not use this product	
⃠ **Forbidden**	■This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ■Children should be supervised to ensure that they do not play with the appliance. ■The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance. ■Patients with osteoporosis. ■Patients with severe heart disease and wearing implantable medical devices such as pacemakers and defibrillators that are susceptible to electromagnetic waves. ■People who have a fever (above 38 degrees). ■Pregnant women or shortly after childbirth and during their menstruation period. ■People who follow medical advice and are prohibited from receiving massage due to thrombosis, aneurysm, severe varicose veins, or other circulatory diseases. Within two weeks after the appearance of blood clots, it is strictly prohibited to massage any form of body parts that have blood clots. ■People with injuries or skin conditions. ■Unsupervised children under the age of 14, or anyone unconscious. ■People advised by their doctors to rest or those feeling unwell. ■People with spinal abnormalities or scoliosis are prohibited from receiving this product due to medical advice due to other diseases. ■People with wet bodies.

Safety Precautions (Must be observed)

Important safety warnings	
⚠ **Warnings**	■If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. ■Keep children away from the movable parts of this product. ■Use a properly grounded power source that is compatible with this device. ■Unplug the power cord after use or before cleaning to prevent personal injury or damage to the device. ■Use this device according to the instructions in the manual. ■Do not use any parts or accessories that are not recommended. ■Do not use this product outdoors. ■Do not use near open flames such as stoves, and do not smoke while using. ■Do not use heating equipment such as electric blankets on this product. ■Do not sit on the back of the chair, leg massagers, shoulders, armrests, or stand on the seat. ■Please read the instruction manual before operation. ■Never use this product for any purpose not listed in the manual. ■Limit each use to 20 minutes. ■Do not use this product if the cover or leather is broken or damaged. ■Do not drop anything into this product. ■Never fall asleep while using this product. ■Do not use this product if you are intoxicated or feeling unwell. ■Do not use this product within one hour of eating. ■Do not apply excessive force when using this product to avoid injury. ■Do not use for purposes other than massage. ■Precautions: Keep away from children. Do not store near high temperatures or open flames. ■Fully insert the power plug into the outlet and ensure secure contact during use. ■When using an extension cord, only use nationally certified products. ■Disconnect power when leaving the premises. ■Immediately discontinue use and disconnect the power if abnormal noise, odor, overheating, or malfunction occurs. ■Do not power the unit from lamp socket outlets. ■Total current draw of connected appliances must not exceed the rated current of the main outlet/circuit. ■Never use near flammable/explosive materials. ■Do not disassemble this product or modify its internal wiring, components, or safety features. ■When unplugging, do not pull on the power cord. ■Only use specified fuse ratings - never substitute with conductive materials or incorrect ratings. ■Do not alter the trip settings of circuit breakers or residual current devices.

Safety precautions

Caution

- ■Check whether voltage is consistent with the specification of this product.
- ■Never insert or unplug the power cord with wet hands.
- ■Do not allow water to enter this product to avoid electric shock or damage.
- ■Do not pull the power cord when plugging or unplugging. Avoid rough handling.
- ■Do not damage the wire or modify the circuit of this product.
- ■Do not clean electrical parts, such as the power switch or plug, with a wet cloth.
- ■Stay away from this product during a power failure to avoid injury if power is suddenly restored.
- ■Stop using this product immediately if it malfunctions, and contact your local supplier.
- ■Stop using this product if you feel unwell, and consult your health care practitioner.

Product care and maintenance

Caution

- ■This product should be maintained by the service center designated by the manufacturer only. No user should disassemble or maintain it without permission.
- ■Do not forget to turn off the main power switch after usage.
- ■Do not use this product if the power socket is loose.
- ■If the product will not be used for an extended period, roll up the power cord and store it in a dry, dust-free environment.
- ■Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine.
- ■Please clean this product with dry cloth. Never use thinner, benzene or alcohol.
- ■The mechanism of this appliance is specially designed and does not require special maintenance.
- ■Do not puncture this product with sharp objects.
- ■Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving.
- ■Please use this product intermittently. Do not keep it working continuously for a long period of time.
- ■ Allow intermittent operation - continuous long-term use is prohibited.

Storage conditions

Caution

- ■Storage room temperature: 5 °C to 40 °C.
- ■Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.

Operating environment

Caution

- ■Do not use this product in a highly humid environment, such as a bathroom.
- ■Stop using this product immediately when the ambient temperature changes sharply
- ■Do not use this product immediately after a sudden change in ambient temperature.
- ■Do not use this product in environments with heavy dust or corrosive gases.
- ■Do not use this product in confined spaces or areas with poor ventilation.

Solutions to ordinary malfunctions

Caution

- ■If the motor sounds during operation of this product, this is the normal operation sound.
- ■If the controller is not working normally, check if the power plug and socket are securely connected, and ensure the power switch is turned on.
- ■If the rated working time is over, this product will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.
- ■Weight limit: 120kg. Heavier users should purchase our reinforced models.

Installation parts

Calf installation instructions

1.Insert the wire of the calf and the air pipe into the front socket of the steel frame assembly (Figure 1).
2.Then push the connected wire and air pipe into the hole in the backrest frame (Figure 2).
3.After the wire docking is completed, open the calf fixing covers on both sides of the steel frame assembly (Figure 3).
4.Lift the calf into the notch, close the fixing covers, and secure it in place with 2 pieces screws (Figure 4).

Note: this step can be ignored for all-in-one installation.

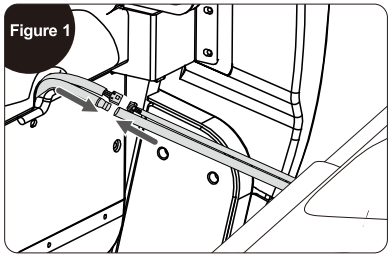

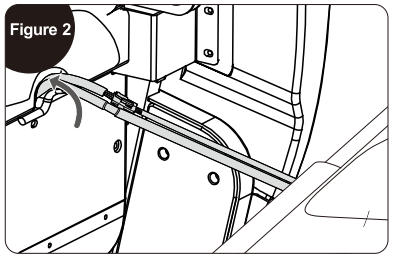

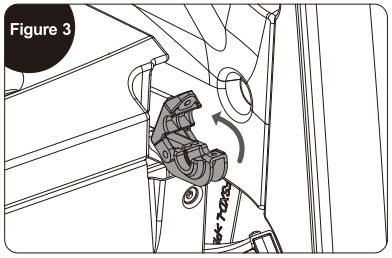

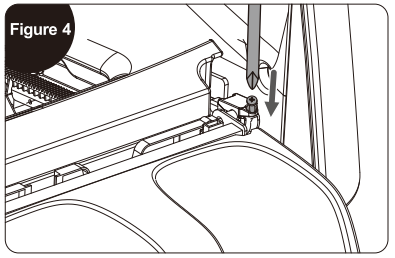

Place massage chair

Installation placement

Make sure there is enough space for the massage chair can be tilted at least 30 cm.

Caution

Do not expose the massage chair to direct sunlight or high-temperature environments (e.g., in front of heating devices). Place it in an area where it can avoid heat and direct sunlight. For long-term use in a fixed location, it is recommended to place a soft cushion underneath. The cushion should be large enough to cover the area where the chair and the footrest touch the floor.

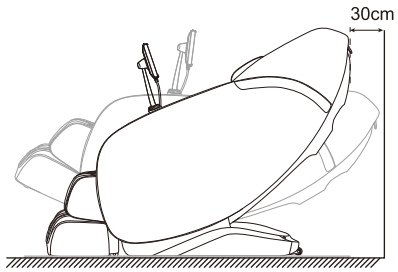

Product lift instruction

Two-person lifting required due to product weight.

Caution

1. Please lift the massage chair when moving it on delicate surfaces, such as wooden floors.
2. When moving on similar surfaces, lifting is recommended to avoid damaging the casters. Be cautious when lowering the chair into the designated position to avoid hand or foot injuries. Do not release the chair until it is completely flat. To prevent floor damage, it is recommended to place a mat or protective covering on the floor.

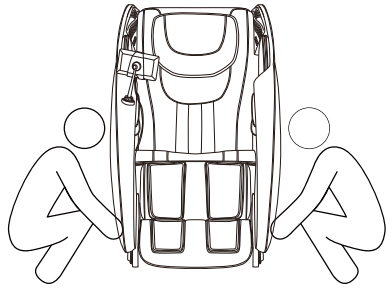

Place massage chair

Move method

Use the rear casters to move the massage chair.Move the chair by tilting it down and backward about 45° as shown in the diagram.
NOTE: Excessive force to title will cause the chair to tip over completely and product damage.

Caution

1.Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2.Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3.When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4.When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

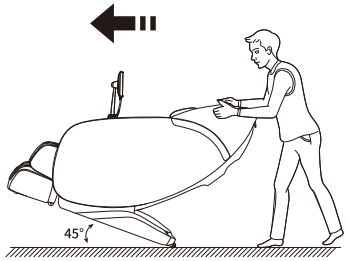

How to disassemble and use headrest cushion and backrest cushion

Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

Caution

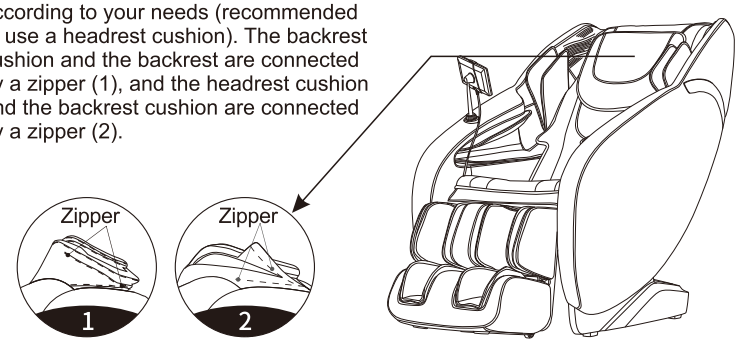

Before use

Check around

Make sure that there are no people, pets and other objects around the unit.

Caution

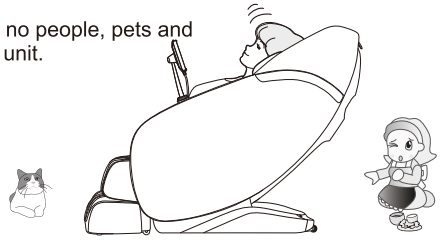

Make sure there are no foreign objects in the gaps of the machine

Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

Caution

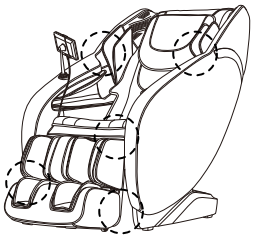

Turn on the power

Caution

Plug in power cord

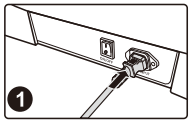

Schematic diagram of power on

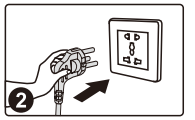

Turn on the power switch ("I" position)

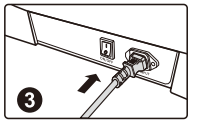

Warn

- ■Please check whether the power cord and power plug are damaged before use.
- ■Please supply power to this product in accordance with the working power requirements of this product's calibration.
- ■It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- ■It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.

Product Structure

Components description

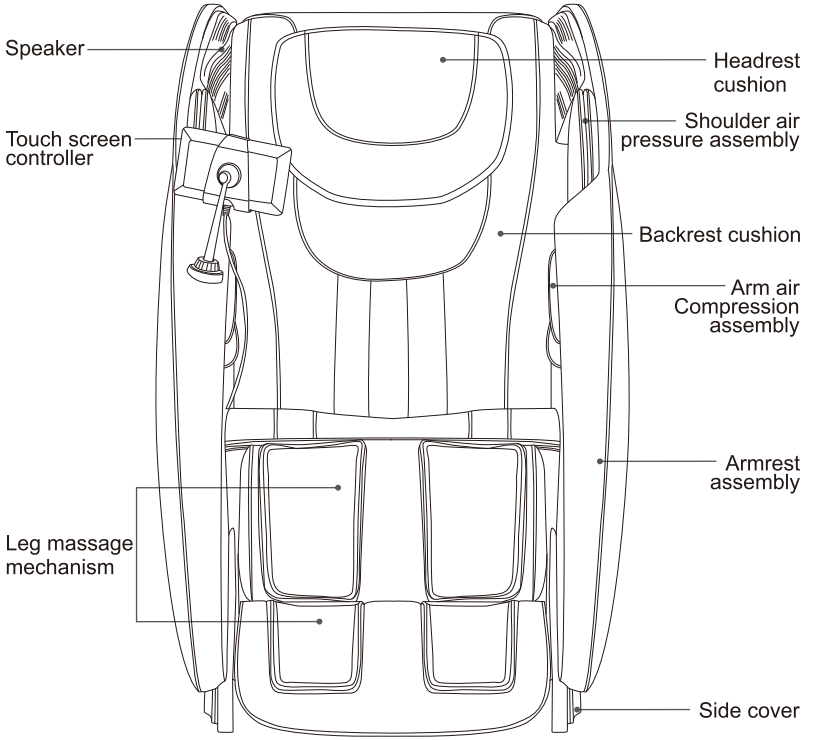

Product Structure

Function distribution

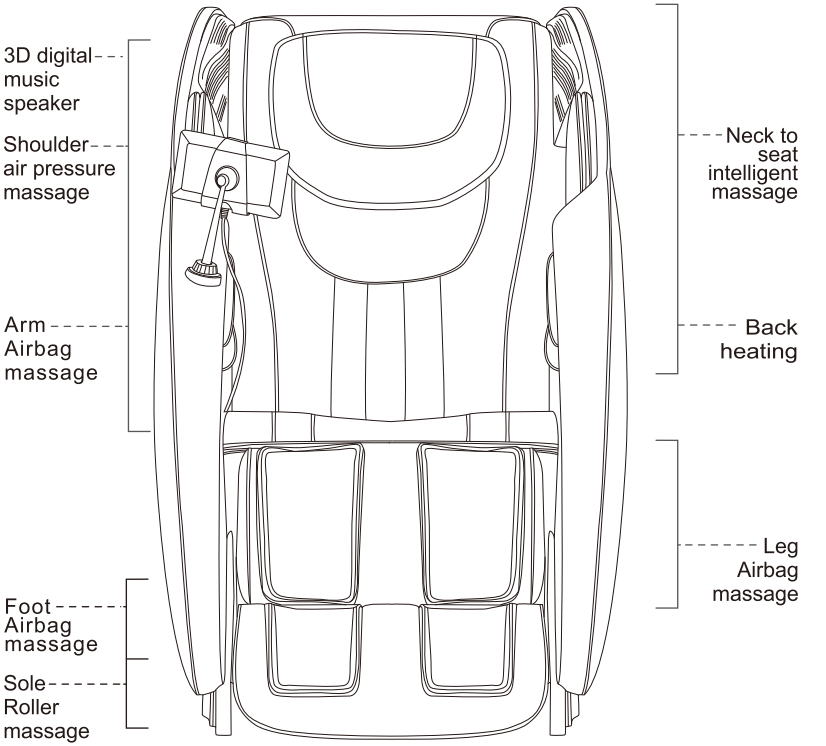

I . Hand Controller Button Instructions:

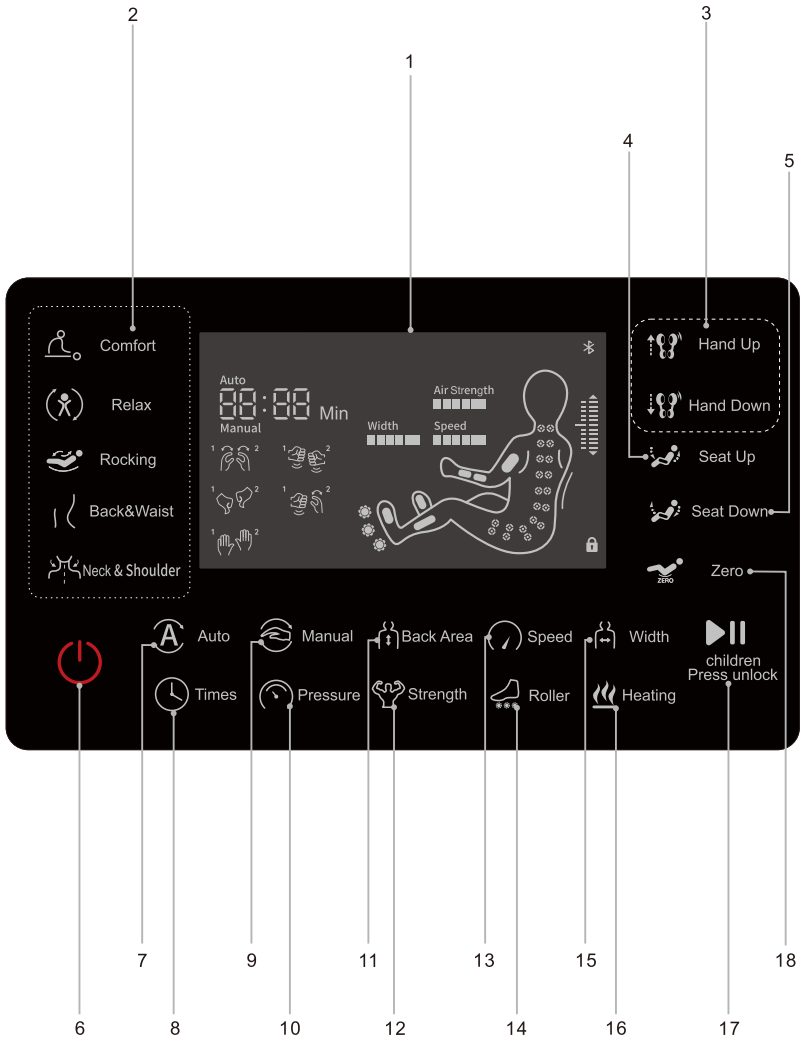

1.LCD Display:
・Shows all massage functions.
2.Auto Massage Button:
・Refer to page 15 for detailed instructions.
3.Mechanism Adjustment Button:
・Adjusts the massage pressure points for the shoulder area and allows massage position adjustment (in fixed point or partial mode).
4.Rise Button:
・Raises the backrest.
5.Recline Button:
・Reclines the backrest.
6.Power On/Off Button:
・Turns the massage chair on or off.
7.Auto Programs Button:
·There are 7 massage programs. Please refer to page 15 of this manual for details.
8.Timer Button:
・Adjusts the timer settings. Refer to page 18 for details.
9.Manual Massage Button:
・Refer to page 16 for details.
10.Air Pressure Zone Button:
・Adjusts the air pressure massage zones. Refer to page 16 for details.
11.Massage Area Button:
・Adjusts the massage area. Refer to page 16 for details.
12.Air Pressure Intensity Button:
・Adjusts the intensity of the air pressure massage. There are five levels.
13.Massage Speed Button:
・Adjusts the massage speed. There are five levels.
14.Foot Roller Button:
・Refer to page 16 for details.
15.Width Adjustment Button:
·Adjusts the massage width. There are five levels.
16.Heating Button:
・Turns the heating on or off.
17.Pause/Start/Child Lock Button:
・Refer to page 17 for details.
18.Zero Gravity Adjustment Button:
·Offers four automatic reclining angles to suit individual preferences.

Ⅱ、Start massage

①. Press the power button to start the massage, the default is comfort massage.
②. Automatic angle adjustment (you can press the “ Auto ”skip).
③. Automatic human shoulder position detection, keep the sitting posture fit with the massage chair (you can press the “ Auto ”skip).
④. Shoulder position adjustment, if the detected position deviates from the actual shoulder position, adjust it to the appropriate position through the up and down buttons of the shoulder position (you can press the “ Auto ”skip), there are 11 shoulder positions in total. If there is no adjustment within 10 seconds, it will enter the massage mode.

Note: During the startup process, you can select the automatic function. Repeatedly selecting the same automatic function will skip the startup procedure and directly enter the massage mode.

Button	Description	Display
Hand Up	Move the massage balls upward to a suitable position	
Hand Down	Move the massage balls downward to a suitable position	

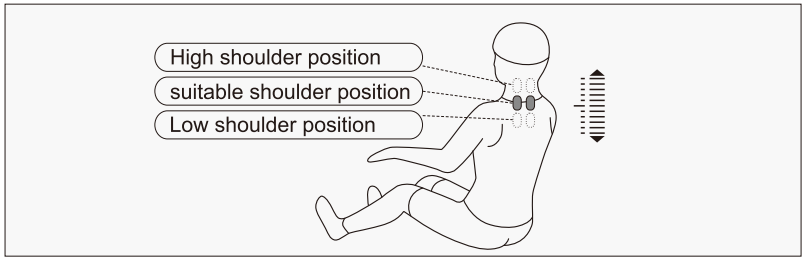

During the detection process of shoulder position and massage pressure points, the hand controller screen will display the shoulder position adjustment icon and emit a “beep” sound. At this time, press the shoulder position up and down keys to adjust the shoulder position.

·Automatic massage

Function	Button	Description	Display
Automatic massage	Comfort	Comfort Massage: The most comfortable massage experience.	Auto 01
	Relax	Relaxing Massage: Gentle and soothing deep massage to relieve body fatigue and promote relaxation.	Auto 02
	Rocking	Rocking Massage: Imitates a rocking chair for relaxation and better sleep.	Auto 03
	Back & Waist	Back and Waist Massage: Focuses on the back and waist area.	Auto 04
	Neck & Shoulder	Shoulder and Neck Massage: Targets shoulders and neck for relief.	Auto 05
	Auto	Full Body Massage: Invigorating massage for the whole body.	Auto 06
		Spine Care Massage: Emphasizes spinal relaxation.	Auto 07
		Fatigue Recovery: Relieves fatigue and improves microcirculation.	Auto 08
		Meridian Relaxation: Promotes meridian balance and enhances the immune system.	Auto 09
		Seated stretch: Reduces excess fat accumulation in hips and thighs.	Auto 10
		Soothing Sleep: Improves sleep quality through acupoint massage.	Auto 11
		Leisure Health: Combats sedentary lifestyle by improving body functions.	Auto 12

· Upper body manual massage

Function	Button	Massage ball adjustmeet		Display
Technique	Manual	Knead: Speed.		
		Pat: Speed, width.		
		Knead & Pat: Speed.		
		Shiatsu: Speed, width.		
		Knock: Speed, width.		
Speed	Speed	5 speed adjustable.		Speed
Width	Width	5 width levels adjustable.		Width
Back stretch	Back Area	Fixed-position spot massage.		H1 Manual
		Small-range localized back-and-forth massage.		H2 Manual
		Full-range back-and-forth massage.		H3 Manual
		Upper Back: back-and-forth massage on the upper back.		H4 Manual
		Lower Back: back-and-forth massage on the lower back.		H5 Manual
	Hand Up	Massage Position Adjustment: (In fixed-point/local mode, you can adjust the massage position).	The massage mechanism moves upward,	
	Hand Down		The massage mechanism moves downward.	

· Air pressure massage

Function	Button	Description	Display
Air pressure Mode	Pressure	Full Body Air Compression Massage: Provides air compression massage for the arms, shoulders, legs, and feet.	
		Upper Body: Focuses on air compression massage for the arms and shoulders.	
		Lower Body: Focuses on air compression massage for the legs and feet	
Leg: Barometric	Strength	5 levels of strength can be adjusted.	Air Strength

· Foot roller massage

Function	Button	Description	Display
Foot roller	Roller	Press this button to activate or deactivate the foot roller massage. It has four modes that can be cycled through: Off, Weak, Medium, and Strong.	

· Heated massage

Function	Button	Description	Display
Heating	Heating	Click the key to enable or disable the heattreatment function.	

· Pause/start massage button

Function	Button	Description	Display
Pause/start	Children Press unlock	Press this button during the massage to instantly pause all massage actions. Press it again to resume the massage from where it was paused. If the pause duration exceeds 20 minutes, the massage chair will automatically shut down.	
Child Lock		Press and hold the Child Lock button for 3 seconds to lock the massage chair. The "🔒" symbol will appear on the display, and all other buttons will be disabled. To unlock the chair, long press the Child Lock button again for 3 seconds, and the "🔒" symbol will disappear from the display, restoring normal button functions.	

· Reclining Angle Adjustment

Function	Button	Description
Sit up	Seat Up	Sit-up Button: Press and hold to raise the backrest and lower the calf rest slowly with a "beep... beep..." sound until it stops at the top position. Release the button to stop the sit-up process instantly.
Recline	Seat Down	Recline Button: Press and hold to lower the backrest and raise the calf rest gradually with a "beep... beep..." sound until it stops at the bottom position. Release the button to stop the recline process immediately.
Automatic Recline	Zero	Zero Gravity: Each press switches to the different automatic recline mode, with a total of four modes that cycle continuously.

· Other manual functions

Function	Button	Description	Display
Timer	Times	Default timer: 20 minutes. Each press adds 5 minutes, up to 30 minutes max. After 30 minutes, it cycles back to 5 minutes with each press.	20min

III. Bluetooth Speaker Operating Instructions:

1. Access the main menu of your smart device and open "Settings". Choose the "Bluetooth" option and enable Bluetooth, which will automatically start searching for new Bluetooth devices.
2. Your smart device will discover the corresponding Bluetooth name (e.g.,IMCM-XXXX**).** Click on the pairing button and, when prompted to pair with the device, select "Pair" to complete the pairing process.
3. Open the music player on your smart device and select a song to start playback.

（Note: The above instructions assume general steps for most smart devices. The specific steps may vary depending on your device's operating system and version.)

IV. Ending the Massage:

1.During the massage, press the power button on the remote control to immediately deactivate all massage functions, and the massage chair will reset to its initial position.
When the massage timer reaches the set time, all massage functions will automatically shut off. The massage chair will remain in its current position and not reset. To reset the chair, press the power button.
2.To completely turn off the massage chair, cut off the power supply as shown in the illustration (Power Supply Cut-off Diagram).
Note: Please refer to the provided illustration for the power supply cut-off procedure.

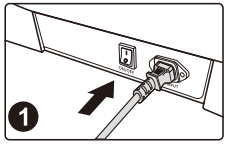

Power off (“0”position)

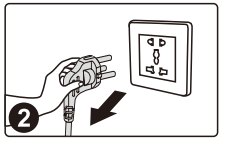

Take off the power plug

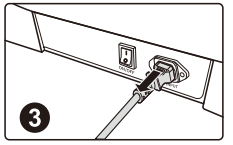

Take off the product power cable.

Clean PVC leather and plastic parts

Wipe the leather with a soft, dry cloth.

■Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.

■When using commercially available leather care products (rags), please follow the instructions for use.

■If the PVC leather is particularly dirty, wipe it by the following methods.

①Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.

②Use the above soft cloth to wipe the leather surface.

③Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.

④Wipe with a wrung soft cloth.

⑤Let it air dry naturally.

■When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.

■Do not use a hair dryer to dry the surface.

■As the color of the fabric will stain the surface of the PVC leather, be careful when wiping the chair with denim and colored fabrics.

■Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.

■PVC leather may be discolored, so when using hair dye, please cover the touched part with a towel.





Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	The product is designed with limit protection for posture adjustments based on its structural design and ergonomic requirements. When the limit is reached, an alert sound will be emitted.

Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is powered on by pressing the switch key, you need to manually select an automatic massage program or other operating mode. If no operation is performed, the machine will automatically shut down after 20 minutes. If manual operation mode is selected, some functions may remain disabled, and the working mode will need to be manually configured in manual mode.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product is made of high-grade anti-corrosion leather that meets environmental protection standards. Due to the inherent characteristics of leather materials, slight noises may occur during friction at moving parts, which is considered normal. Note: If you hear tearing sounds from the fabric or leather while the machine is in operation, stop using it immediately and consult a professional for inspection and repair.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product Specifications

Model: A312B-2
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz ▭
220-240V~ 50Hz/60Hz ▭
Rated power: 80W
Rated time: 20min
Safety structure: Class Ⅰ

Material description: PVC, PA, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD

Santé Sweden AB
Reg. no. 556646-7154
Website: www.massageprodukter.se
E-mail: info@massageprodukter.se
Phone: 020-27 27 20

Copyright © Santé Sweden AB
All rights reserved

SANTÉ